

Mounting Instruction

Handlebar Risers 25320

Fits for:

BMW R1200GS LC (2013-)

BMW R1200GS Adv. LC (2014-)

Shipment includes:

2x Handlebar riser with offset

4x Screw M8x30 (8.8) T45

1x cable tie

1x ABE certificate

1x Mounting instruction



Dismantling:

Remove the upper halves of the handlebars clamps.


Mounting:

The handlebar risers are used directly on the lower handlebar bracket (clamp mountings on the top yoke) under the handlebar. Please use enclosed torx screws M8x30 (picture right side).

Torque: 23Nm



The original clamp parts are fitted with original screws (please proceed according to the manufacturing book!). The upper clamp must be mounted without any gap. See pictures below. Check the screws regularly for a tight fit! Torque: 23Nm

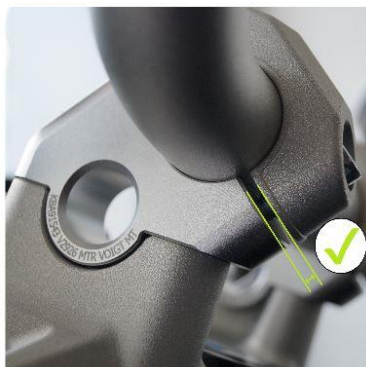

Note:

Please ensure that the brake and clutch hose and cables are not tensioned or chafed even when the handlebar is at steering stop. If the brake line is tensioned, proceed as follows: The brake line is attached to the frame holder behind the control tube with a cable tie. Remove this cable tie. Secure the brake cable to the frame using the enclosed cable clip (see picture right side). This is relieved by the higher position. If the clutch cable is tensioned, you can pull it out of the vehicle to the handlebar.

